

# TECH NOTE 001

**ISSUE DATE:** 14-Dec-04  
**EXEDY REF:** 001/1-RM  
**REVISED:** 22-Nov-05

## NISSAN PATROL RD 2.8LTR RING GEAR REUSE

### NISSAN RD2.8Ltr

#### Instructions to replace Dual Mass Flywheel with Solid Type Flywheel

#### The ring gear must be removed and refitted to solid flywheel

1. To remove the ring gear, extend the depth of the three (3) cover assembly to flywheel bolt holes nearest to the dowel pins to allow for 6.0 mm diameter pin punch.
2. With care, remove the ring gear evenly.
3. Clean and refit the ring gear to the solid flywheel by the heat shrink method. Note- the chamfered edge of the ring gear teeth to face away from the friction surface.