

TECH NOTE 020

ISSUE DATE: 18-May-06
EXEDY REF: 020

WIRE SPACER RING – INSTALLATION ASSIST

**“It is important to remove the wire spacer ring located between the cover and diaphragm after the assembly has been mounted to the flywheel.
The ring holds the assembly in a partial disengaged position to aid assembly.
Failure to remove the ring will result in premature clutch slip”**