

TECH NOTE 037

ISSUE DATE : - 04/11/09

EXEDY REF : - 037

Toyota Landcruiser Prado 3.0L 1KD-FTV

Removal technique of clutch release bearing: -

1. Withdraw the transmission approximately 30 mm.
2. Insert a flat blade screw driver between the collar and bearing.
3. Twist screw driver 90 degrees and remove the bearing.



Installation technique of clutch release bearing: -

1. Locate the clutch release bearing on the gearbox front bearing retainer (snout).
2. Locate the throw out fork on the release bearing.
3. Position transmission to the engine block.
4. Operate the fork opposite direction for clutch release.
5. This will snap the bearing into the cover assembly.



EXEDY
No.1 for Clutch